# DURA-METER<sup>TM</sup>

**Operating Temp** 

Meter Accuracy

Max Pressure

**Power Source** 

**Nutating Disc** 

Wetted Materials

Housing Chamber

**Moisture Sealed** 

Amount Metered

Units Measured

**Chemically Resistant** 

**Batch Count** 

Calibration

Dimensions

**EPA Compliant** 

Weight

**Backlit LCD Display** 

Flow Rate

+/-.5%

40 PSI

Yes

Yes

Yes

Yes

1.5 lbs


Yes

Polypropylene

Dura-Meter

### CALIBRATION

NOTE: Use a primed system. Verify your calibration. Fluid viscosity changes with temperature.

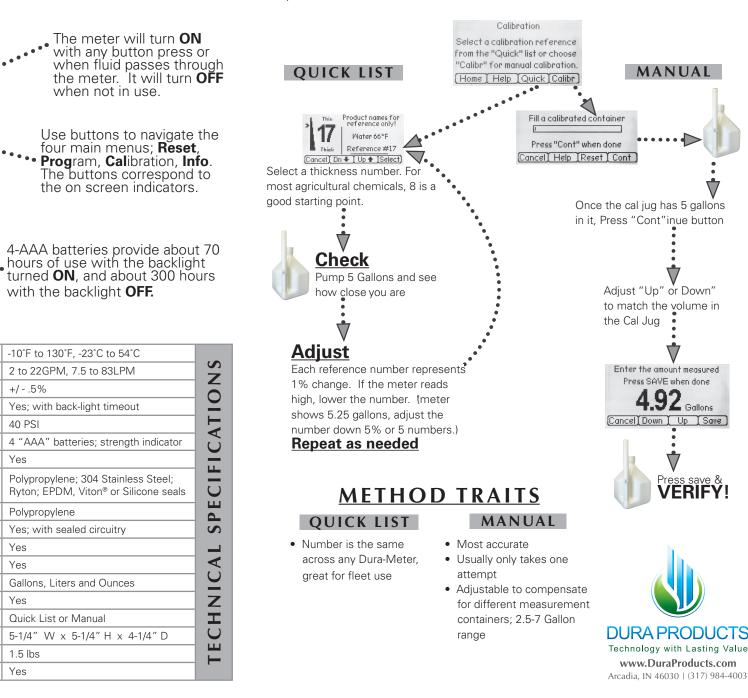

## DURA **AUTO-BATCH**<sup>TM</sup> EASY CADDY

10.00

A check valve has been included to keep •the system primed. Accuracy depends

on the system staying primed.

Fast. Simple. Safe.<sup>™</sup>

#### **5 SAVED CALIBRATIONS**

This meter is equipped with the ability to save and recall five different manual calibrations. Always be aware of the cal factor or Fluid # being used and **VERIFY!** 

SAVING:

Manually calibrate. After pressing "Cont", you will be prompted to enter the fluid # where you want the calibration stored.

Choose a PreCal Number to save your fluid calibration #

(Fluid 1 (Fluid 2 (Fluid 3 Next)



Hold down the "Cal" button. Select "PreCal" and then the Fluid #.

Home [PreCal] Quick [Calibr]

**NOTE:** Use a primed system. Always verify your calibration. Fluid viscosity changes with temperature.

**Operating Temp** -10°F to 130°F. -23°C to 54°C S 2 to 22GPM, 7.5 to 83LPM Flow Rate Ζ Meter Accuracy +/-.5%ATIO Yes; with back-light timeout Backlit LCD Display Max Pressure 40 PSI 4 "AAA" batteries; strength indicator Power Source CIFIC, **Nutating Disc** Yes Polypropylene; 304 Stainless Steel; Wetted Materials Rvton: EPDM. Viton<sup>®</sup> or Silicone seals PE Housing Chamber Polypropylene S Moisture Sealed Yes; with sealed circuitry Amount Metered Yes ◀ **Batch Count** Yes NIC Units Measured Gallons, Liters and Ounces Chemically Resistant Yes CH Calibration **Ouick List or Manual** 5-1/4" W x 5-1/4" H x 4-1/4" D Dimensions ш Weight 1.5 lbs F EPA Compliant Yes

#### **AUTO-BATCH OPERATION**

Set Amount

Press start

**NOTE:** The calibration setting that is used in Auto mode, is the last calibration the meter was assigned.

3 The pump will begin to dispense fluid and automatically shuts off when complete.

PUMP SWITCH OPERATION



Pump switch must be in the ON position for Auto mode to work. Before switching to manual mode, place the pump switch in the OFF position. **Failure to do so, can result in unwanted** product being dispensed.

#### VOLUME ADJUSTMENT



Use "Up"or "Down" buttons to change amount. Scroll speed increases the longer you hold the buttons. "Reset" defaults to 10Gal, 40L, & 1280z.