

DEF DURA-PUMP™ EASY CADDY

DEF 4000 SERIES / MOUNTING OPTIONS



275 / 330
TOP MOUNT
TOP DRAW



275 / 330
TOP MOUNT
BOTTOM DRAW



135
TOP MOUNT
TOP DRAW




135
TOP MOUNT
BOTTOM DRAW



275 / 330
SIDE MOUNT
BOTTOM DRAW


DEF DURA-PUMP™ TOP UNLOAD

DEF 4000 SERIES / MOUNTING OPTIONS

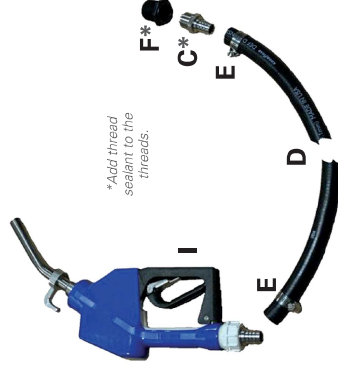

*Add thread sealant to the threads.

(without RSV Coupler)

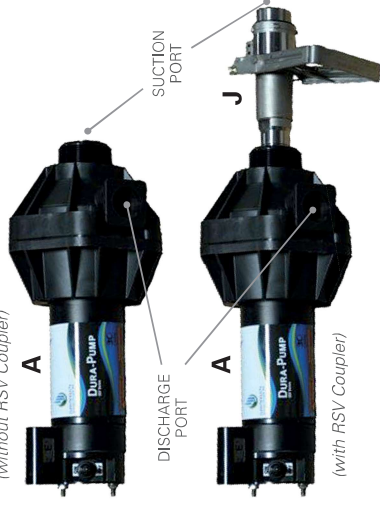

(with RSV Coupler)

(with RSV Coupler)

DURA-METER™ ASSEMBLY & MOUNTING OPTIONS

TOP UNLOAD with meter



EASY CADDY with meter



DISCHARGE HOSE ASSEMBLY



*Add thread sealant to the threads.

TOP SUCTION HOSE ASSEMBLY



*Add thread sealant to the threads.

BOTTOM SUCTION HOSE ASSEMBLY



*Add thread sealant to the threads.

CONTENTS (SYSTEM DEPENDENT)

A	(1) Dura-Pump™	H	(1) RSV/RRV Coupler
B	(1) Swivel Hose Barb	I	(1) Nozzle
C	(1) 3/4" x 6ft, 1.8m Suction Hose	J	(2) 90° Hose Barb
D	(4) 3/4" Hose Clamps	K	(1) 18" Suction Hose
E	(1) 2" Female Camlock	L	(1) 2" x 1" Bushing
F	(1) 3/4" x 20ft, 6m Discharge Hose	M	(1) 1" x 3/4" Poly Reducer
G	(1) Caddy		

IMPORTANT! Apply an even coat of thread sealant on male threads. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

TOOLS REQUIRED

- / 5/16 wrench or flathead screwdriver
- / Pipe thread sealant

CONTENTS (SYSTEM DEPENDENT)

A	(1) Dura-Pump™	F	(1) 1" x 3/4" Poly Reducer
B	(1) 1" Downtube	G	(1) Dura-Meter™ (optional)
C	(1) Swivel Hose Barb	H	(1) 1" Nipple
D	(1) 3/4" x 20ft, 6m Discharge Hose	I	(1) Nozzle
E	(2) 3/4" Hose Clamps	J	(1) RSV Coupler

IMPORTANT! Apply an even coat of thread sealant on male threads. Hand tighten joints and torque another 1/2 to 3/4 turn until threads are sealed.

- ### TOOLS REQUIRED
- / 5/16 wrench or flathead screwdriver
 - / Pipe thread sealant